



PHANTOM TWIN CEILING INSTALLATION

SUPPLEMENTARY MANUAL

17.02.20



PLANET
LIGHTING



STEP 1: REMOVE THE TWIN CEILING TUBE

1. Place the Phantom twin mount base on a flat surface as pictured.
2. Undo the 2 screws on the cap with a 5mm Allen key (Fig.1)
3. Remove the cap from the twin ceiling tube. Note, the cap should remain attached by an M5 Earth Tag.



Fig. 1

STEP 2: DISCONNECT AND REMOVE THE TWIN CEILING TUBE

1. Unscrew the 4 x M8 bolts: (1)(2)(3),4) with a CR-V 6mm Allen key (Fig. 2)

2. Disconnect the M5 Earth Tag (5) with a CR-V 8mm nutrunner. (Fig. 2)

3. Disconnect the 2 x 3-way plugs: (6) and (7). (Fig. 2)

4. Lift off and remove the twin ceiling tube from the ceiling mount (below right).

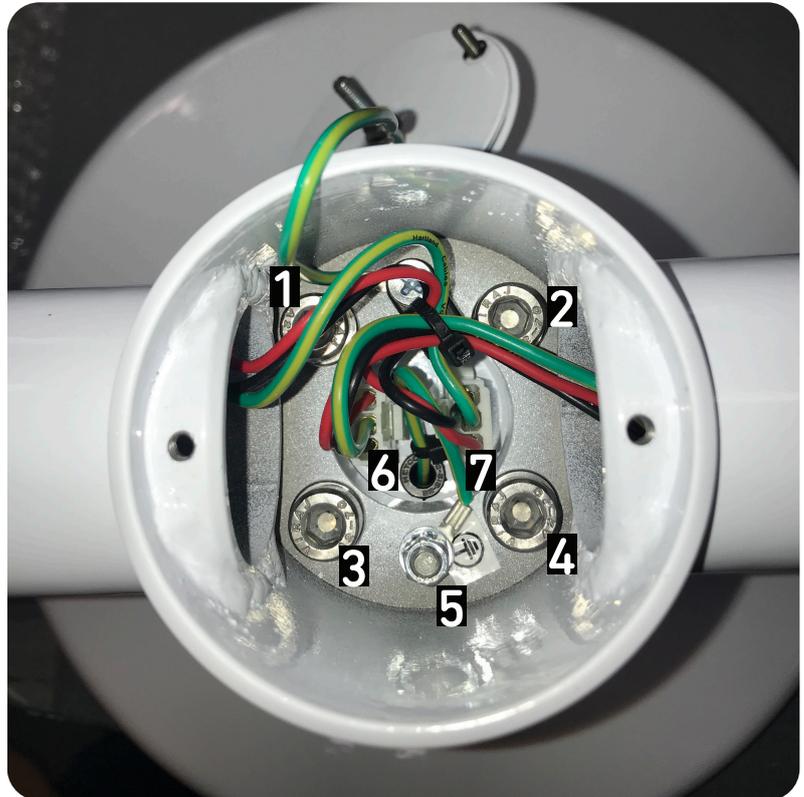


Fig. 2

1. The twin ceiling tube shown removed from the ceiling mount (Fig. 3).

NOTE! DO NOT REMOVE
the 3-way plugs from the
top of the twin ceiling
tubes (8).



Fig. 3

STEP 3: REMOVE CEILING COVER

1. Unscrew the 2 x ceiling cover screws with a phillips head screw driver (Fig.4)
2. Gently lift off the ceiling cover and disconnect the 2 x power indicator lights (1),(2) by disconnecting both 2-way plugs (Fig.4).
3. Remove the ceiling cover.



Fig. 4

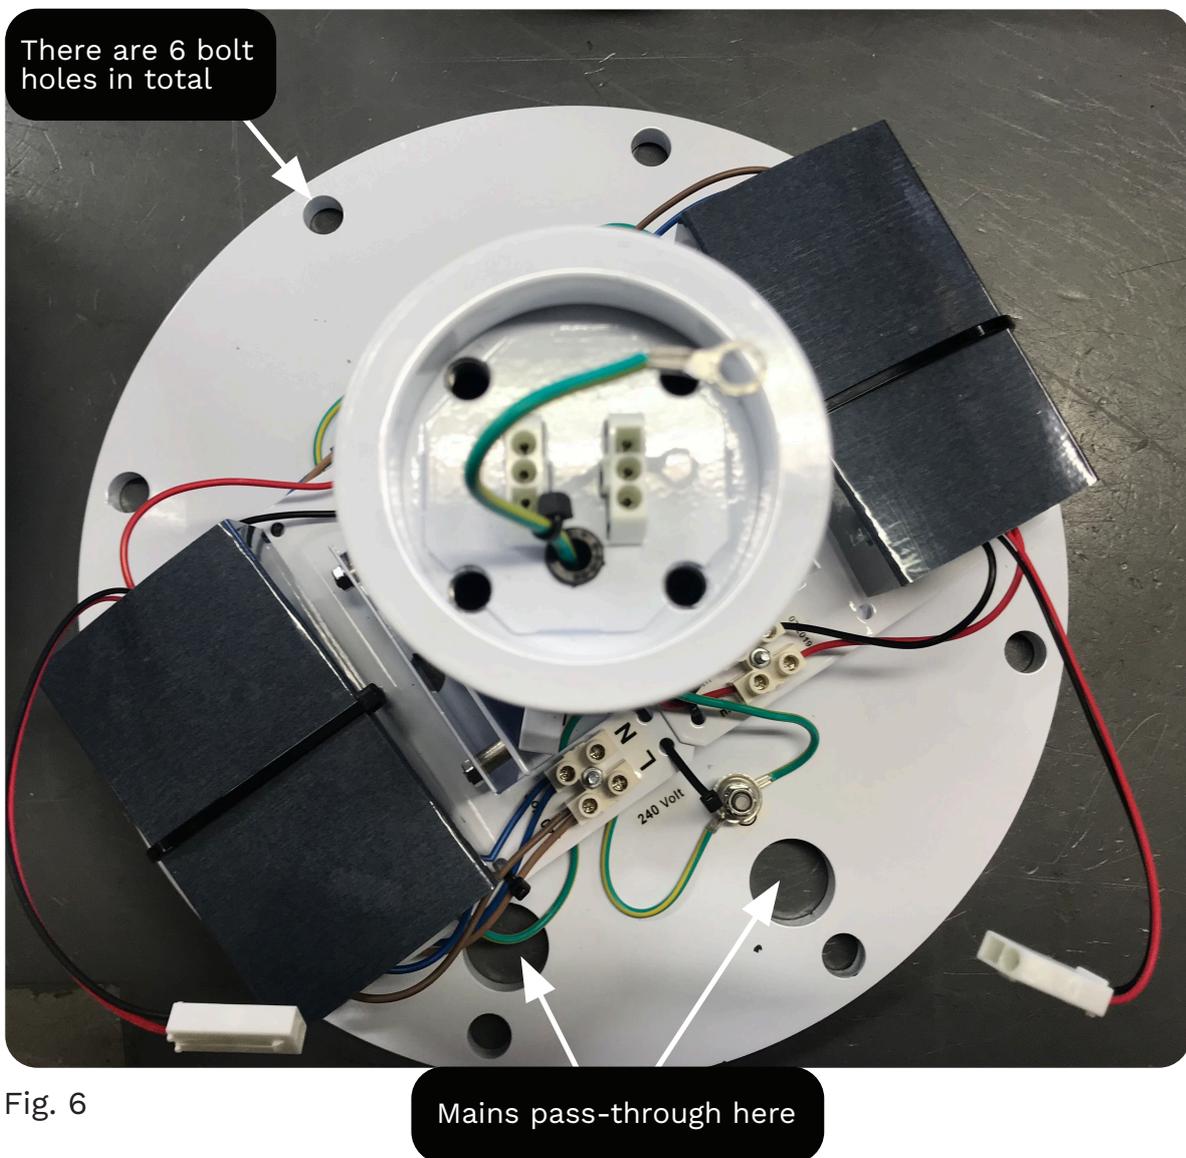


Fig. 5

1. Disconnecting the two indicator lights power supply from the ceiling cover (see Fig.5).

STEP 4: BOLT TO ROOF AND CONNECT MAINS POWER

1. Bolt ceiling plate to ceiling using 4 to 6 bolts through the bolt holes NOTE! 6 BOLTS ARE RECOMMENDED.
2. Connect mains power through one of the mains pass-through holes (Fig.6)



STEP 5: REATTACH CEILING COVER TO PLATE

1. Reconnect the 2 indicator light 2-way plugs with the ceiling cover. (Fig. 7)
2. Tighten the 2 x ceiling cover screws to re-secure the ceiling cover (Fig. 8). Note, do not over-tighten.

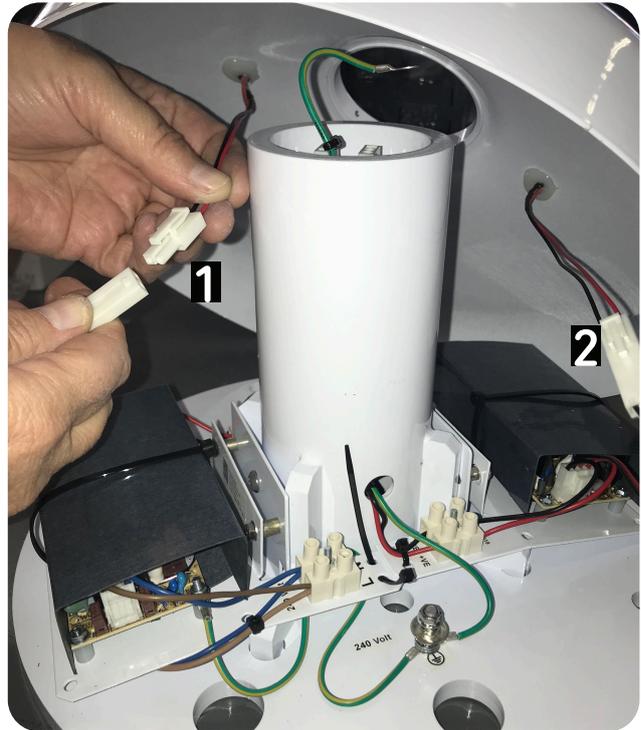


Fig. 7

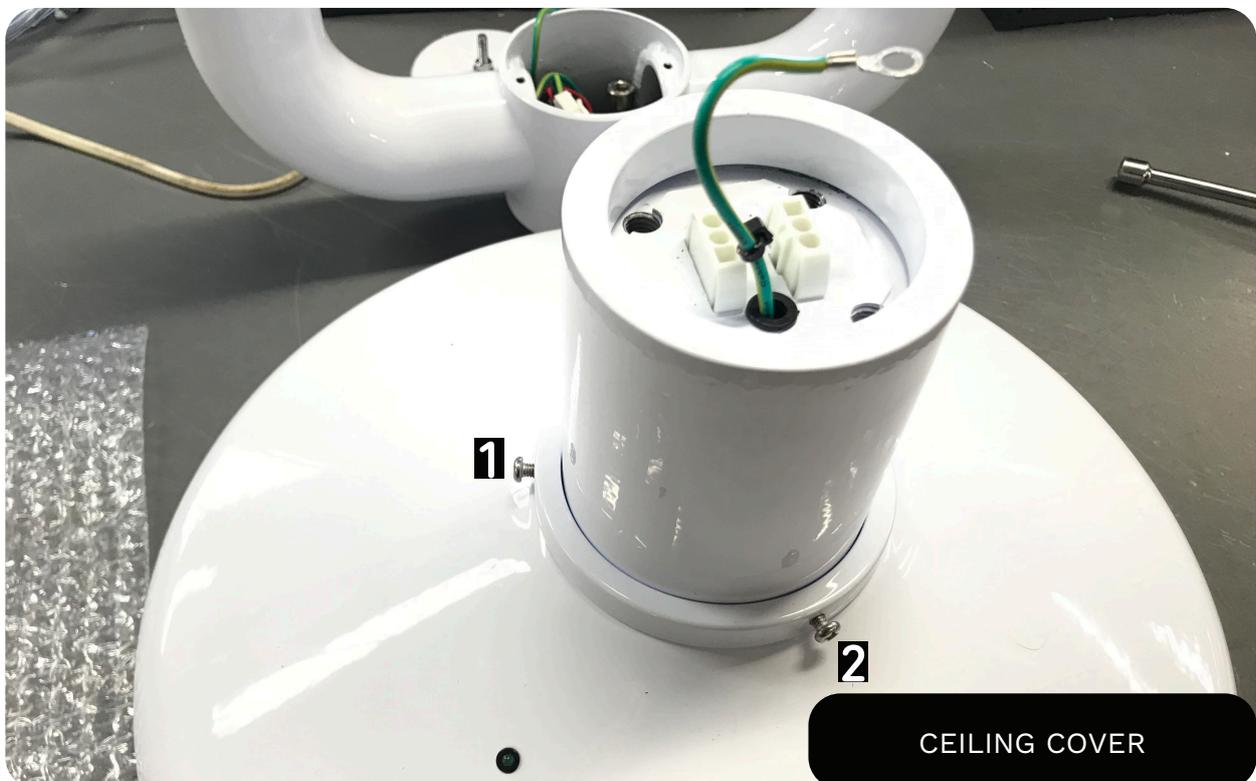


Fig. 8

Fig. 8

DATASHEET

PHANTOM-TWIN



STEP 6: RECONNECT THE TWIN CEILING

1. Reattach the twin ceiling tube to the ceiling mount.
2. Reconnect the 2 x 3-way plugs: (1) and (2) (Fig.9).
3. Screw on the 4 x M8 bolts: (3)(4)(5),6). Ensure you do not pinch wires as you are tightening (Fig.9).
4. Reconnect the M5 Earth Tag (7). **NOTE! Remember to include BOTH M5 shakeproof washers.** (Fig. 10).

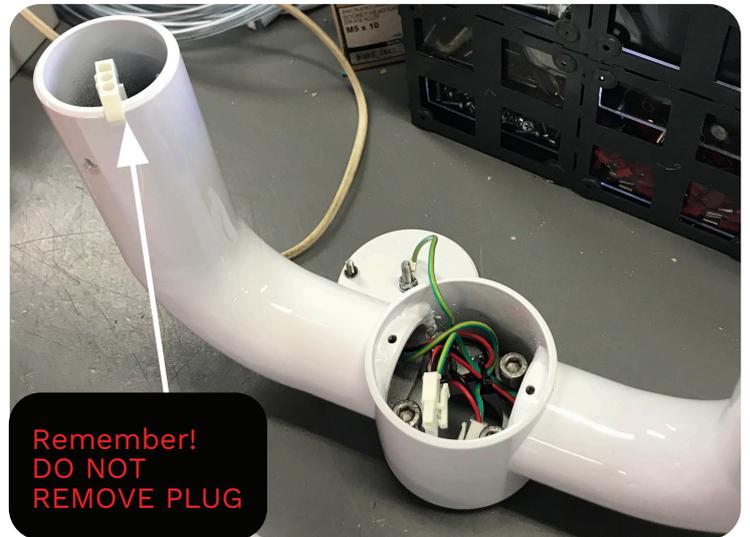


Fig. 9

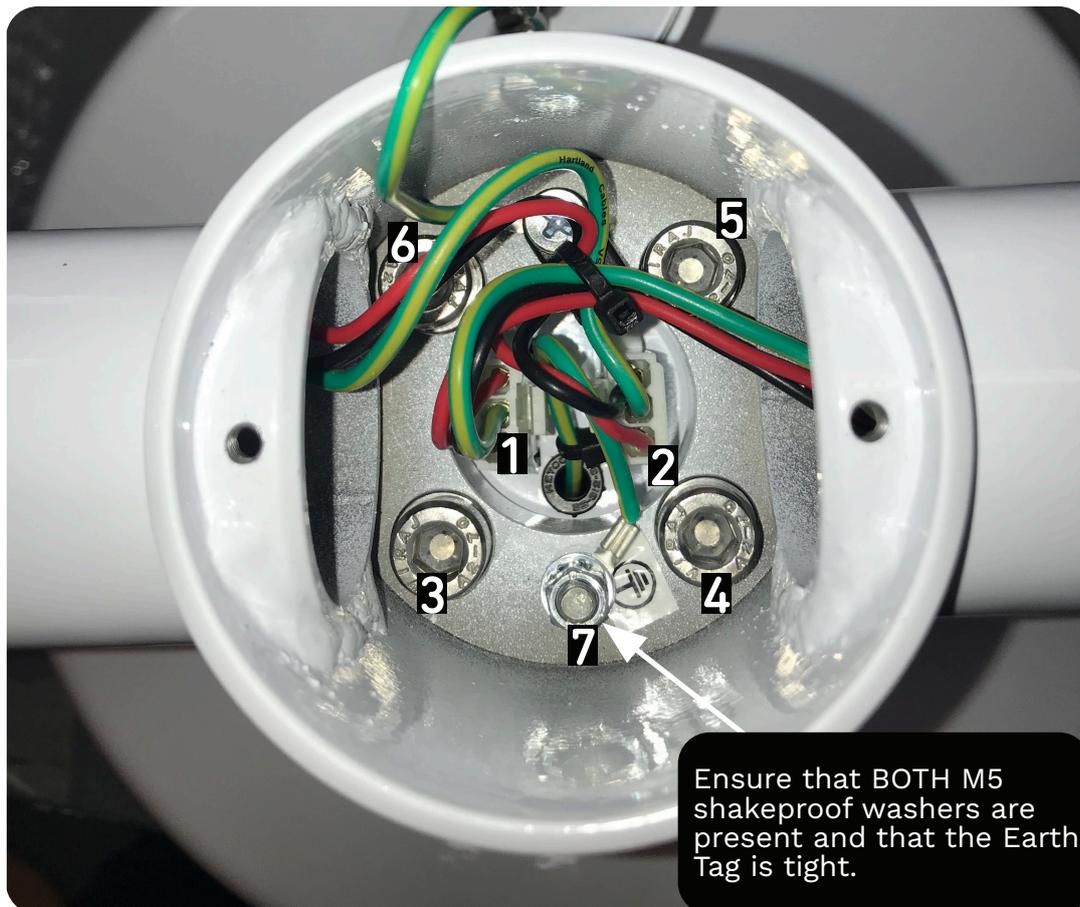


Fig. 10

STEP 7: REPLACE THE TWIN CEILING TUBE CAP



Fig. 11

1. Secure the 2 x screws into the ceiling tube to put the cap back on (Fig. 11).

STEP 8: REFER TO PHANTOM

PHANTOM INSTALLATION MANUAL



1. To continue installation, refer to the existing documentation: Phantom Installation manual.

Designed and Made in
Australia.

Exported to
the World.



Customer service:
+ 61 (0)2 6659 5600
Monday - Friday
9am - 5pm

12 Tamarind Drive Bellingen
NSW 2454 Australia
Phone + 61 (0)2 6659 5600
Fax + 61 (0)2 66552121
sales@planetlighting.com
planetlighting.com

